


Glass Side Panels: installation instructions

Thank you for your purchase of a set of custom glass side panels.

- 1 Unscrew Chrome nuts on the sides of the original side panels x4
- 2 Use the 13 mm socket wrench to remove the brass nuts x4
- 3 Remove original side panels x2
- 4 Attach glass panels
- 5 Place 4 silicone spacers followed by screwing on the short chrome nuts x4

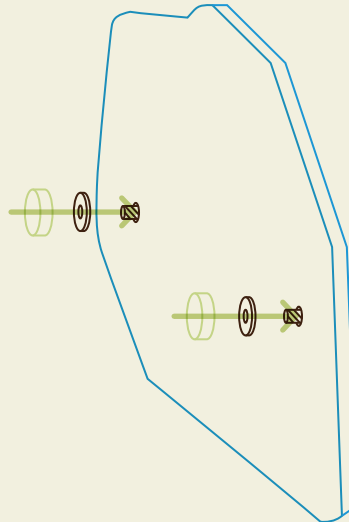

Tools:

- 13 mm socket wrench
- Phillips screwdriver
- Short chrome nuts x4
- Silicone spacers x4