


Preventative Maintenance

It is important to change out your gasket, shower screen and screw once every 6 months. Since these pieces come in contact with the coffee they can become covered in old coffee oil and contribute negative flavors to your cup. Changing out your gasket is the trickiest part, but with our gasket pick, it is very easy to accomplish. Follow the steps below:

- 1 Unscrew dispersion screw with short flat-head screwdriver
- 2 Remove screw and shower screen
- 3 Place tip of gasket pick into one of the holes around the gasket to puncture side of the gasket
- 4 Pull gasket down and away with gasket pick to remove
- 5 Insert new gasket by pushing up with the end of the gasket pick around the group head
- 6 Use portafilter to seat the gasket by inserting the portafilter into the group head (may need to repeat several times)
- 7 Insert new shower screen and finger tighten dispersion screw (The dispersion screw should not be too tight, it can warp the dispersion screen if tightened with a screwdriver)

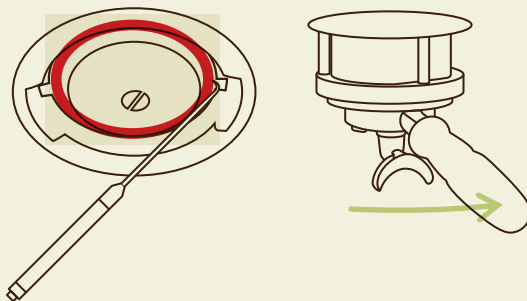

This preventative maintenance procedure should be done once every 6 months to keep your coffee tasting good and machine performing properly.

Tools:

- Gasket pick
- Short flat-head screwdriver