
quick start guide

WWW.LAMARZOCCO.COM


VIA LA TORRE 14/H 50038 SCARPERIA E SAN PIERO FLORENCE - ITALY



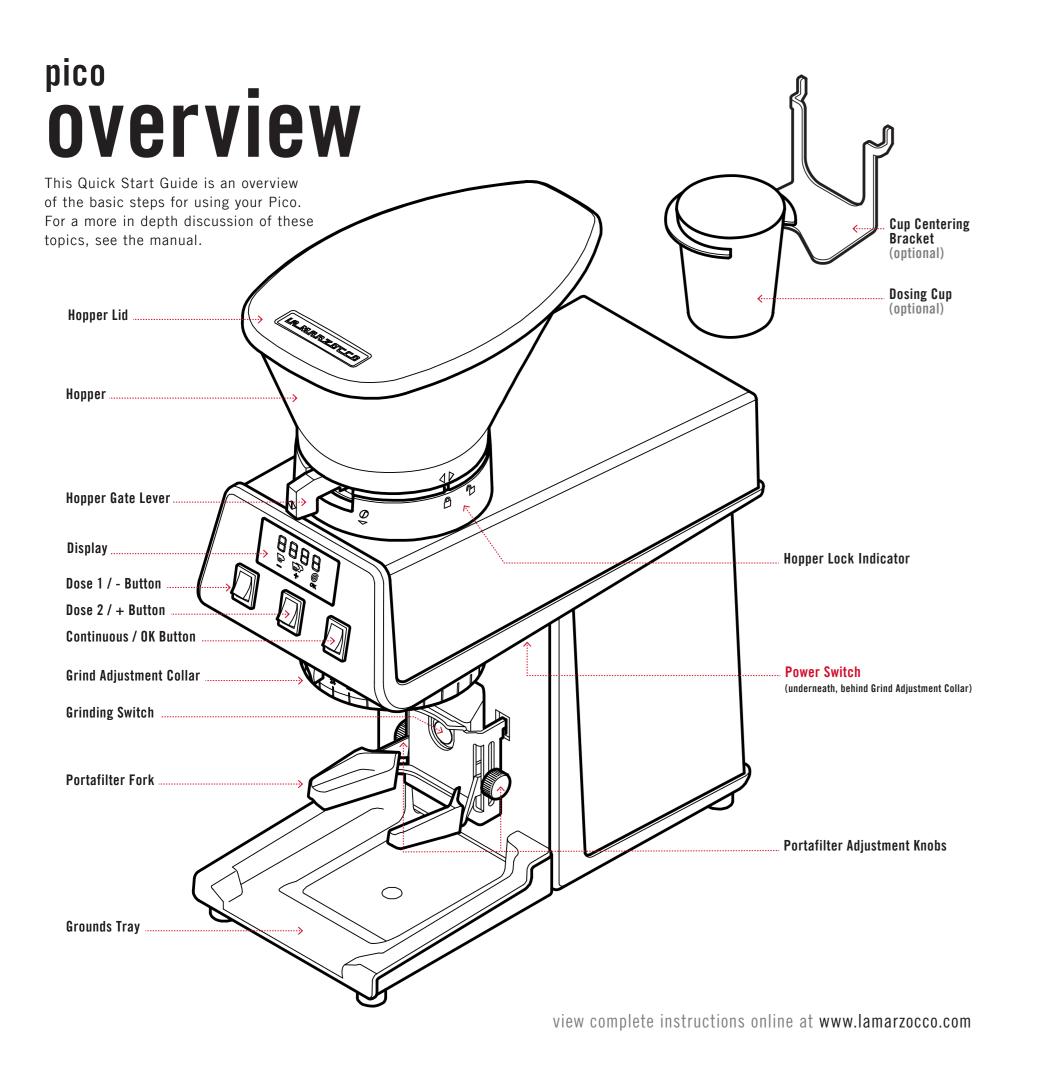

unpacking & set up, loading coffee, grinding coffee


during setup refer to the manual for more detailed information




Remove the grinder from its box, plug power cord into the bottom of the grinder, and place grinder upright on the

Remove hopper lid, fill hopper with


coffee, and replace lid.




Install grounds tray. Install the portafilter fork by inserting the tabs into the two slots.

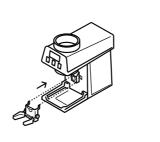

To adjust the portafilter fork, loosen the knobs and change the position until it holds the portafilter in place. Tighten the knobs to lock it into

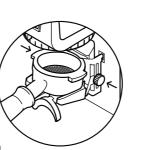

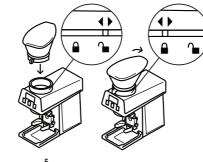

Insert hopper, ensuring that the hopper lock indicator lines up in the unlocked position. Gently turn the hopper clockwise until the hopper lock indicator lines up in the locked nosition.



Press Dose 1 button or Dose 2




Place the portafilter on the portafilter fork, and press it into the grinding switch to begin grinding coffee. The grinder will show the dose countdown and stop when finished.

The switches on the front of the grinder correspond with the 3 icons displayed on the screen. This allows for 2 doses to be programmed, as well as a continuous function for manually grinding.


in order to use the grinder correctly, the dose and the grind must both be set setting grind



To speed up the extraction if the shot is too slow, turn the grind adjustment collar to a higher



To slow down the extraction if the brewing is too fast, turn the grind adjustment collar to a lower number.



setting dose


grind needs to be adjusted.




The size of the grind affects the speed at


to adjust the total time of the brewing the

which espresso is extracted. Therefore,





To adjust either dose, press and hold the corresponding button for



Use the + and - buttons to either increase time for a larger dose or decrease time for a smaller dose. When finished, press the OK button to

single dose mode

save the dose.




The grinder can be used in continuous




In continuous mode, the grinder The continuous button can also operate in will grind coffee while the grinding single dose mode. In this mode grinding switch is held, and stop when begins when the continuous button is

pressed and continues until pressed a Note: a dosing cup and its centering bracket

are included for use in this mode.





To change the continuous button to operate in single dose mode, press and hold the continuous button for 10 seconds. A dot will appear to the right of the dose indicating that it is operating in single dose mode.


To change back to continuous mode, press and hold the continuous button again for 10 seconds. The dot will disappear, indicating that the grinder is operating in continuous mode.

scan this QR code

covertible bottomless portafilter configuration



The portafilter fork comes preconfigured for standard spouted portafilters, standard bottomless portafilters, and convertible portafilters using spouts. However, when using the convertible portafilter in the bottomless mode, the rubber pads should be inverted.

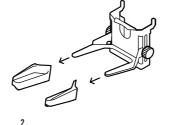


Slide the hopper gate lever to the right

to open the gate and allow coffee to

fall into the grinding chamber.

Remove the rubber pads by sliding them forward and off of the fork. Pay close attention to the orientation of the pads as you remove them.

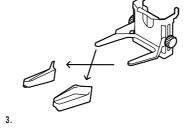


Plug grinder into power outlet and turn


on power to the grinder using the power

switch, located next to the grind

adjustment collar.


Exchange the position of the rubber pads to the opposite side of the fork.

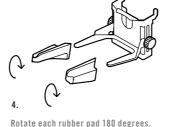

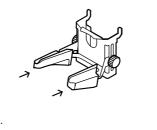

Slide the rubber pads back on to the fork until fully seated.

continuous mode

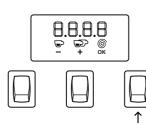

mode. This mode can be used to add a small amount of coffee if the dose is not